




**Dogtra-Europe**

12 – 14 Rue Augustin Fresnel  
78310 Coignieres, FRANCE  
TEL: +33 (0) 130 62 65 65  
FAX: +33 (0) 130 62 66 11  
E-mail: info@dogtra-europe.com

**Code setting guide for Dogtra ARC 1200S**

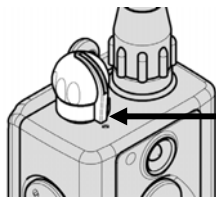

Intensity selection dial of the transmitter

1. Start with the receiver/collar turned off and the transmitter turned on. Select the intensity level **0** with the intensity selection dial.



Intensity selection dial of the transmitter

2. Hold down the On/Off button of the receiver/collar for 5 seconds, until the green LED light on the receiver/collar starts to blink rapidly.



Nick and Constant Button of the transmitter

3. Hold the Nick button and the Constant button on the left side of the transmitter simultaneously down for 3 seconds or until the rapid green blink of the LED on the receiver/collar resumes a slower pace.  
The code setting work is now completed. If you push the Pager button of the transmitter, the receiver/collar will vibrate.