



Dogtra-Europe
12 – 14 Rue Augustin Fresnel
78310 Coignieres, FRANCE
TEL: +33 (0) 130 62 65 65
FAX: +33 (0) 130 62 66 11
E-mail: info@dogtra-europe.com

Code setting guide for Dogtra ARC 800 / ARC 802

Synchronization of the transmitter with the BLACK receiver/collar

1. Start with the receiver/collar turned off. Turn on the transmitter by pushing the ON/OFF button located on the side of the transmitter and set the intensity dial to "0".
2. Place the red dot on the back of the transmitter to the red dot of the receiver/collar you would like to code. Hold the two red dots together for about 5 seconds until the green LED blinks rapidly on the receiver/collar.
3. While the green LED is rapidly blinking on the receiver/collar, press the 2 grey buttons on the front and side of the transmitter simultaneously. The LED indicator light on the receiver/collar will blink every 4 seconds when the coding is complete.
4. Press the grey button on the front of the transmitter. If the receiver/collar vibrates, the synchronization has been successful.

Synchronization of the transmitter with the ORANGE receiver/collar

1. Start with the receiver/collar turned off. Turn on the transmitter by pushing the ON/OFF button located on the side of the transmitter and set the intensity dial to "0".
2. Place the red dot on the back of the transmitter to the red dot of the receiver/collar you would like to code. Hold the two red dots together for about 5 seconds until the green LED blinks rapidly on the receiver/collar.
3. While the green LED is rapidly blinking on the receiver/collar, press the 2 orange buttons on the front and side of the transmitter simultaneously. The LED indicator light on the receiver/collar will blink every 4 seconds when the coding is complete.
4. Press the orange button on the front of the transmitter. If the receiver/collar vibrates, the synchronization has been successful.

If you would like to see a video showing the synchronization process, please visit this link:
https://www.youtube.com/watch?v=vqDZyXv_jUg

Please feel free to call us at +33 (0) 130 62 65 65 if you have any difficulties.